

Installation PHYSISOFT 906 USB (Windows 7)

Don't plug in the **PHYSIMETER 906 USB** at this time!


1. Download and start "setupPhysisoftUSB.exe". Choose the language.




2. Click "Next"




3. Click „I Agree“ and „Next“

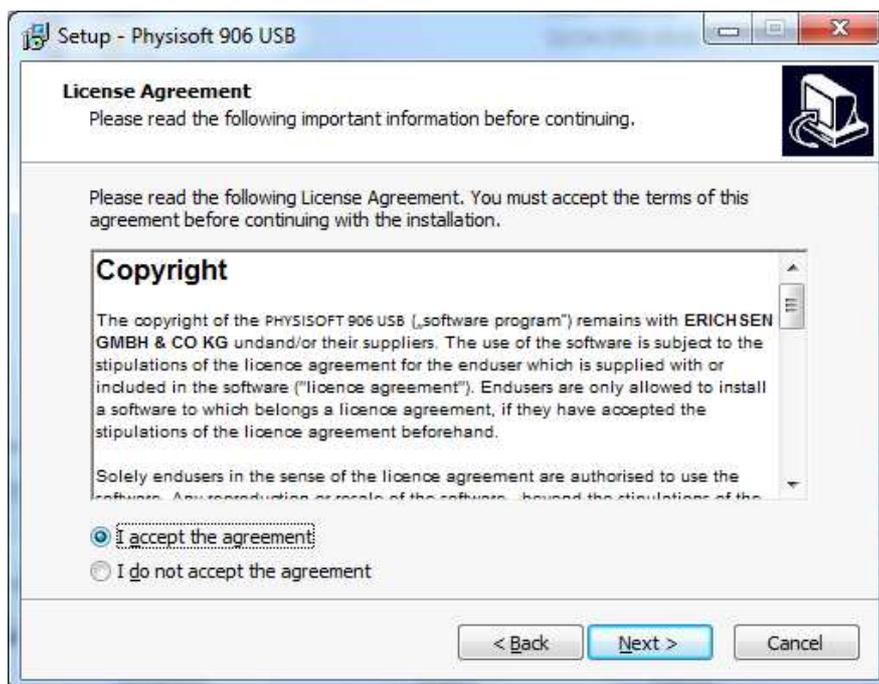


4. Choose Installation Folder and confirm with „Next“

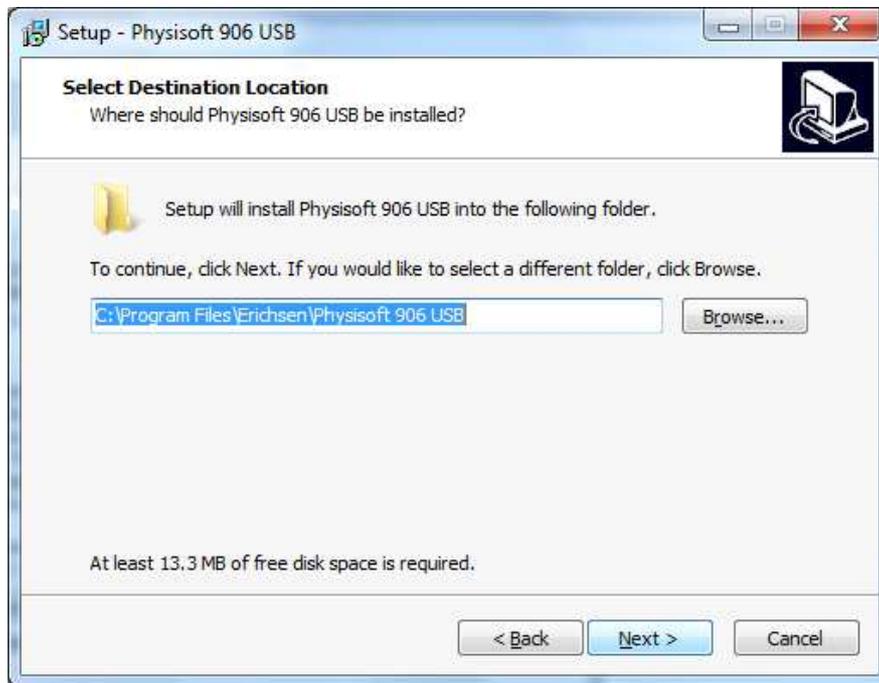

5. Confirm start menu folder with "Next"

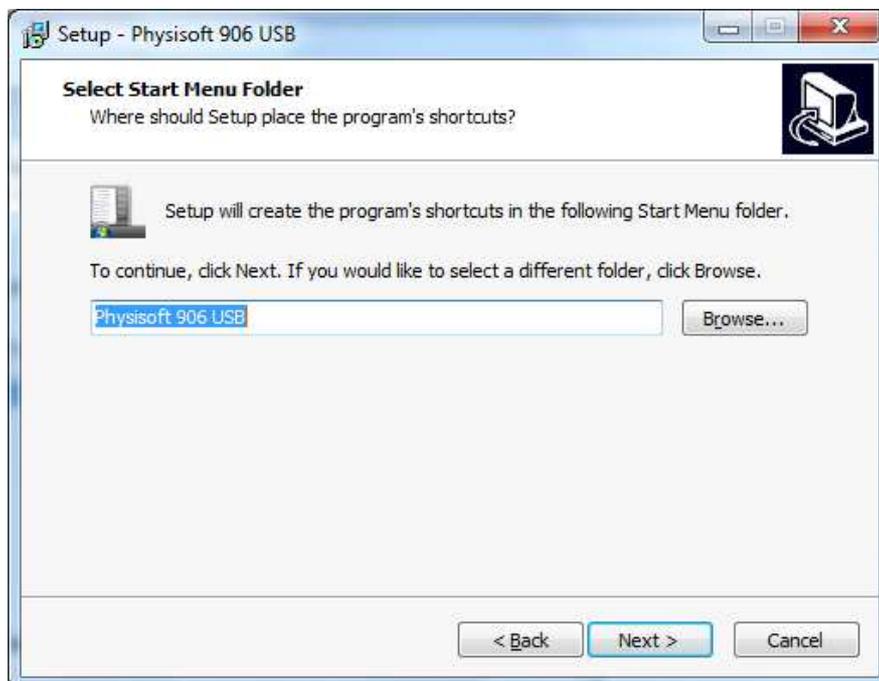

6. Uncheck, if you don't want to install a desktop icon. Confirm with "Next"

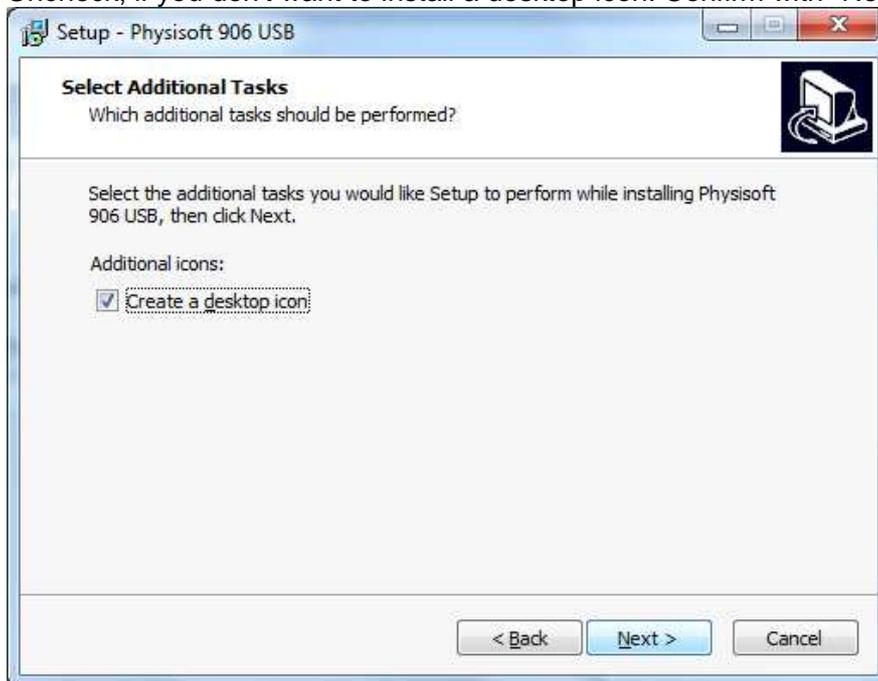

7. Click to "Install"



8. After a few seconds a driver installation wizard starts. Click "next"



9. Click to "Install this driver software anyway"



10. Click to "Finish"



11. Click to finish



12. Connect and switch on the "Physimeter 906 USB". Wait until the operating system has recognized the Device. Repower the Physimeter before you start the "Physisoft 906 USB"

© 2012 by ERICHSEN GmbH & Co KG
<http://www.erichsen.de>